

TERENCE

P10

— Digital Piano —

Please read the manual before using

Dear customer,

Thank you very much for purchasing our TERENCE product! We greatly appreciate your support and trust in our products.

At TERENCE, we are passionate about providing high-quality musical instruments that inspire creativity and bring joy to musicians of all levels. Our products not only focus on precise sound quality but also strive to bring you unlimited creative space. We hope that you can enjoy the endless charm of music and ignite your musical creativity when using our products.

We would also like to invite you to join our vibrant community of music enthusiasts on our social media platforms. By following us on Instagram, Youtube, and Tiktok, you can share musical inspiration, educational content, and connecting with like-minded individuals who share the same love for music

Facebook: <https://www.facebook.com/terencepiano>
Instagram: <https://www.instagram.com/terencepiano/>
Youtube: <https://www.youtube.com/@Terencepiano>
Tiktok: <https://www.tiktok.com/@terencepiano>
Website: terencemusic.com.cn

If you encounter any problems or need our assistance during use, please don't hesitate to reach out to our friendly customer support team via email or WhatsApp. Our after-sales team will be dedicated to providing you with support and solutions to ensure a smooth and worry-free shopping experience.

Email: terenceserve@outlook.com
Terence WhatsApp: +8613308481701

Wishing you a pleasant musical journey!

Sincerely,
TERENCE After-Sales Team



WhatsApp

PREFACE

Important Information

Before using this product, please note the following important information.

1. Before using the AC transformer to supply power to this product, the AC transformer must first be checked for any damage.
2. Check the power cord carefully for breaks, broken wires, bare wires, and any other serious damage. Do not allow children to use the AC transformer if it has been seriously damaged.
3. Children under 3 years of age should not use this product.
4. Use only the original factory standard transformer
5. AC transformers are not toys.
6. The AC transformer must be unplugged before cleaning the product.

Please read this manual carefully before use.

Function Introduction



1. 88 keys standard keys
2. Grand piano tone
3. DC 5V2A Type-c input
4. SW electronic light touch switch start/close
5. VOL volume control knob increase/decrease volume
6. Stereo dual speakers 10W*2
7. USB / midi wired connection to external devices
8. SUSTAIN single sustain pedal function
9. 3-PED sustain, post sustain, weak tone pedal function (optional)
10. AUXIN audio input
11. HEADHONE dual headphone monitoring
12. built-in dual Bluetooth: wireless connection to audio Bluetooth and midi Bluetooth

Directory


Piano Back and Side Panels Illustration	1
Preparation Before Use	2-4
Fault Removal	4-5
Attention	5-6

Piano Back and Side Panels Illustration

1.Name of each part

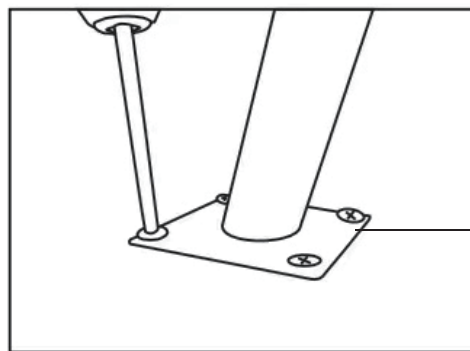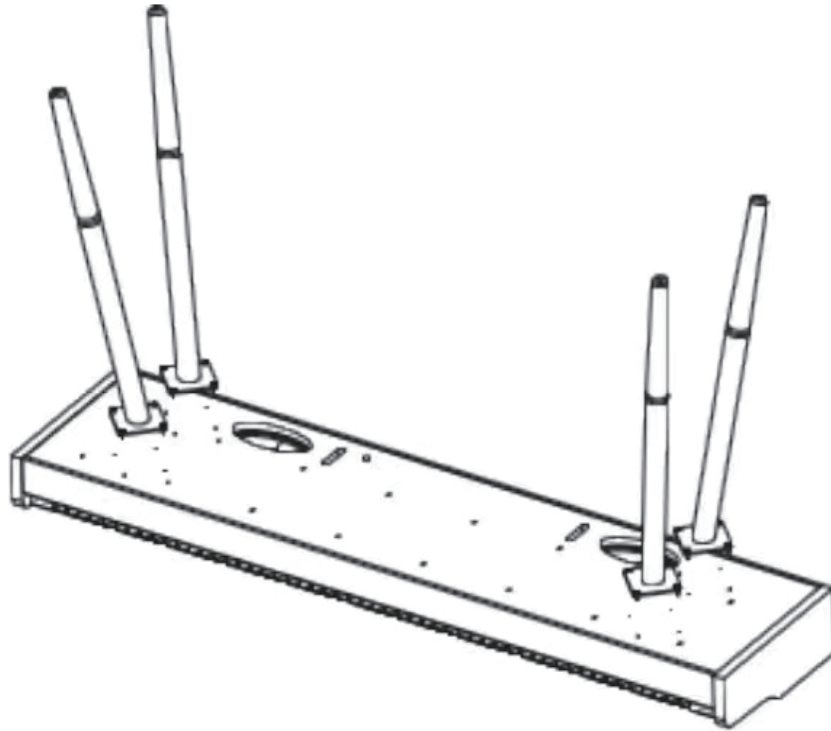

6*13 screws

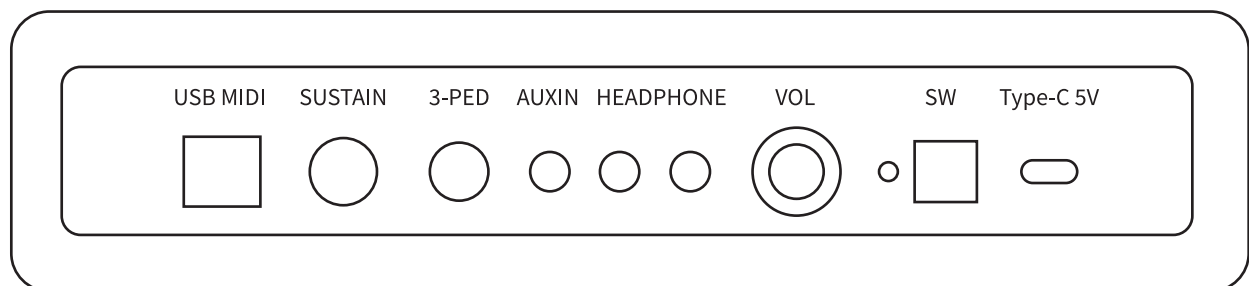 


Preparation Before Use

This section contains information related to the preparation of the instrument, please read this section carefully before switching on the power supply.

1. Power Supply


- (1) First make sure that the piano's power switch is off; if it is not, please switch the power switch off first.
- (2) Connect the power cord, first plug it into the Type-C 5V jack on the back of the piano, then plug the other end of the power adapter into a power outlet.
- (3) After switching on the power, turn all volume controls to minimum first.
- (4) When switching off the power of the piano, turn all volume controls to minimum first, and then switch off the power switch.

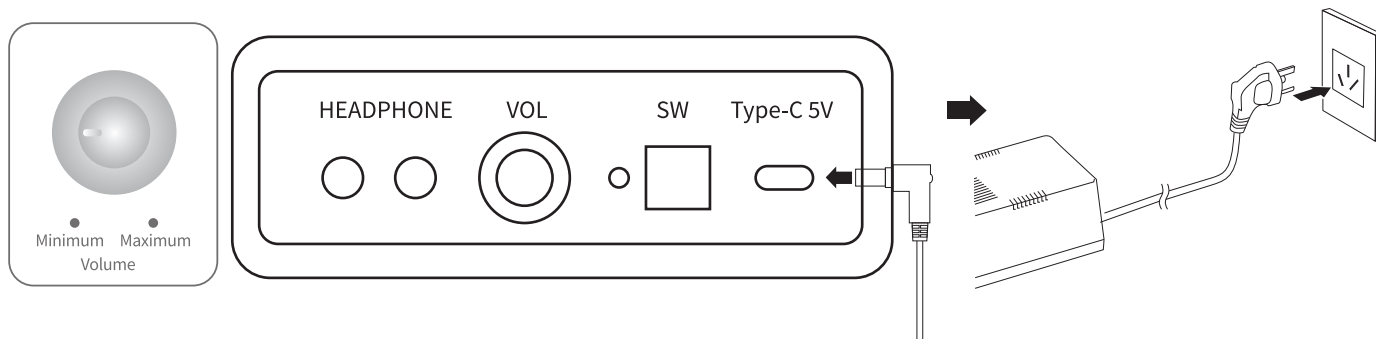


! Caution.

- (1) For safety purposes, disconnect the power supply and do not use this product during a thunderstorm.
- (2) When not in use for a long time, unplug the power cord and store it properly.
- (3) Please ensure that the power supply voltage is 220V AC +10%, too high or too low voltage will cause damage to the piano.
- (4) Do not unplug the power cord from the power outlet in a charged state.

2. Extended Interface

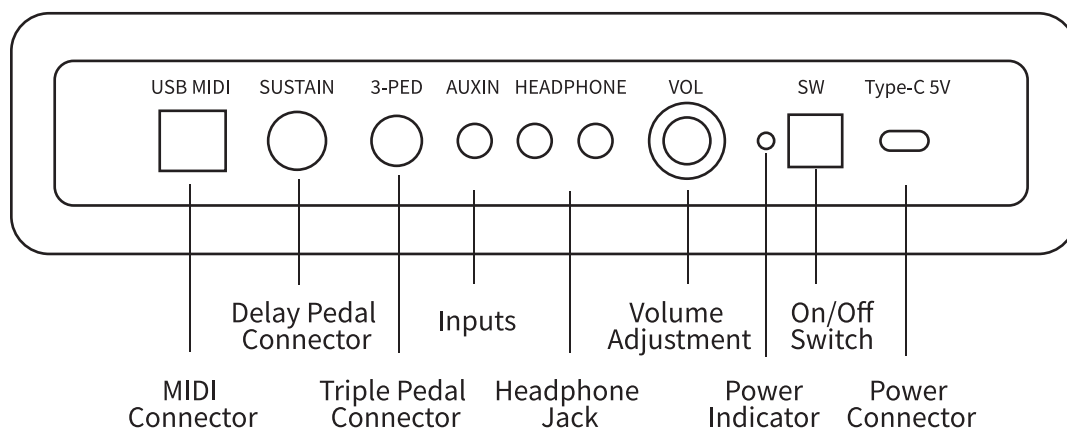

3.Headphone Jack

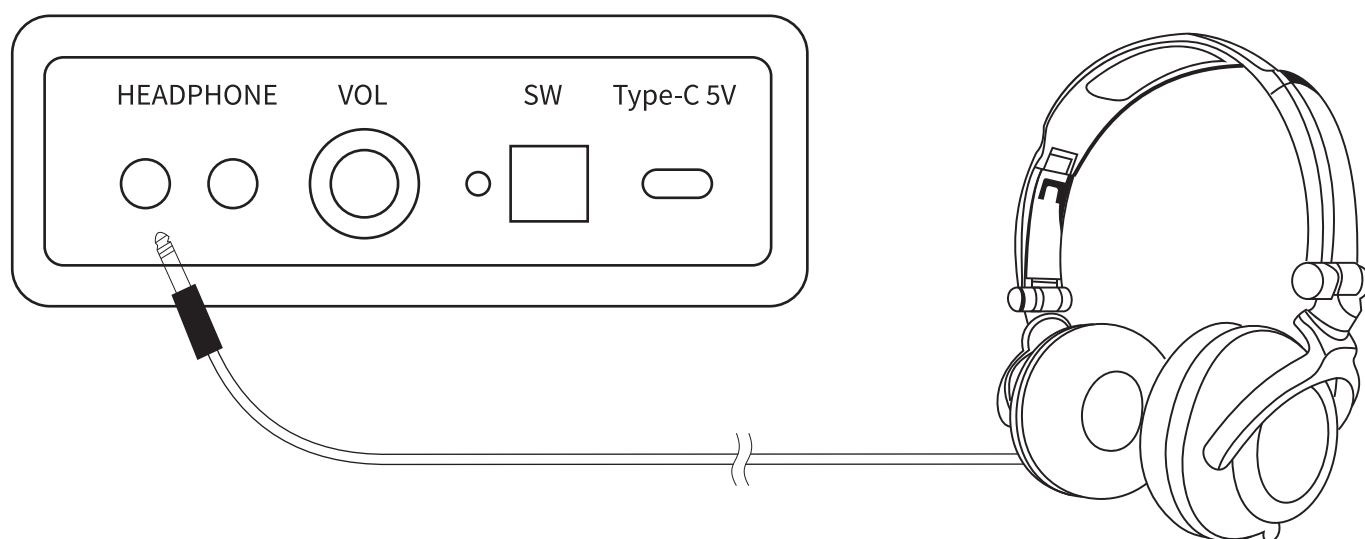

4.Triple Pedal Interface


Triple Pedal

Uses the exact same sustain pedal as a traditional grand piano, the select sustain pedal, the sustain pedal, and the soft pedal. Depressing the pedal turns the effect on; releasing the pedal turns the effect off.


Please connect the pedal cable to the pedal connector on the back of the piano.

The left pedal is the soft pedal, which makes the sound weaker when you press it. The middle pedal is the sustain pedal. Press and hold the pedal for the notes that need to be extended, and then press the pedal to extend those notes, but not the notes that will be played later.

The right pedal is the sustain pedal, and when it is pressed, the sound of already sounded notes and newly played notes will be extended after they are released. (This piano supports a semi-delay pedal.)

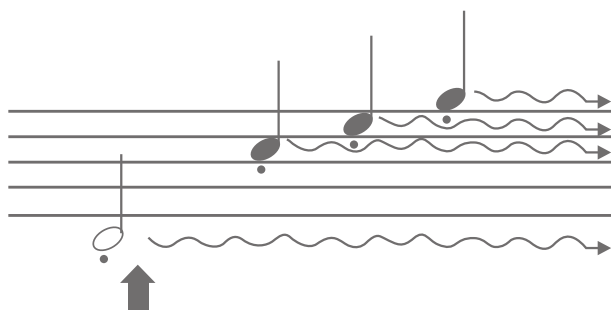

If the sustain pedal is pressed here, the note, as well as the note played before the pedal is released, will be extended for a longer period of time.

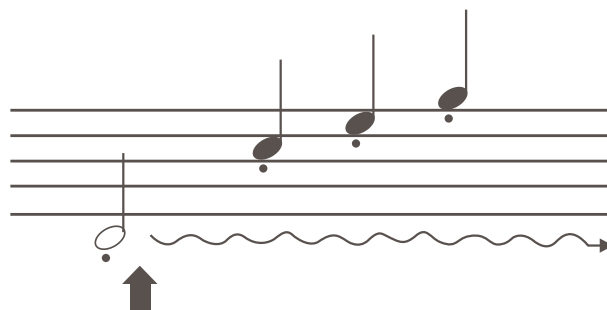

If the back sustain pedal is pressed while the note is held down, the note is extended until the pedal is released.

Smart Connectivity

Bluetooth Audio

1. Connect your mobile phone to Bluetooth.
Bluetooth Name: TERENCE PIANO
Password: 8888
2. Listen to music.
Music playback software on mobile phone APP, you can play music and enjoy the high quality vibration enjoyment brought by the electric piano.

Connecting APP Teaching

1. Download the APP software on your mobile phone.
2. Turn on the Bluetooth function to connect the mobile phone APP;
Bluetooth name: TERENCE PIANO, some mobile phones need to open the mobile phone positioning function.
3. Open the software, choose any song, enter and start playing.
4. Click on the Bluetooth connection option in the mobile phone APP,
after opening, you can choose: Connect via Bluetooth → Confirm operation,
Next → Connect Piano, Confirm connecting Bluetooth.

Fault Removal

Problem	Reason	Solution
No sound is produced when pressing the keys of the keyboard	Reason① The volume control is set to the minimum position. Reason② There are headphones or the plug converter is plugged into one of the headphone jacks. Reason③ The power supply is not connected to 220V or the instrument is turned off.	1. to the right of the largest volume “+” direction to turn the volume control 2. Remove all connections from the headphone jack. 3. Turn on the home power, and then press the “POWER” button to turn on the computer.
Unable to transfer data after connecting the piano to the computer	/	1. Check and make sure that the USB cable is connected to the piano and the computer and that the music software on the computer has selected the correct device. 2. Power off the piano, and then end the music software on the computer. Next, power on the piano again, and then restart the music software on your computer.

Problem	Reason	Solution
Pedal does not work	Reason ① The cable jack of the pedal is not plugged into the main unit. Cause ② The plug of the pedal is loose.	1. Plug the pedal cable into the jack of the main unit. 2. Check to make sure that the plug at the end of the pedal cable connecting the three pedals is not loose, and plug it in tightly.
Noise can be heard from the piano's built-in speakers or headphones when used with iPhone/iPad/Android tablet apps	Signal Interference	Before connecting the piano to your iPhone/iPad/Android tablet, turn on the device's Airplane Mode or stay away from other electronic household appliances.

Attention

Careful maintenance and protection of this product is very important to prolong the life of the product and minimize malfunctions.

Avoid heat, moisture or direct sunlight.

Do not expose the product to direct sunlight or place it near an air conditioner or in an extremely hot place.

Do not use near televisions or radios.

This product may cause video or audio interference with television and radio reception. If this occurs, remove the instrument from the TV or radio.

Do not use paints, thinner, or similar chemicals for cleaning.

Clean the product with a soft cloth dampened with water, soaked in the solution and wrung out until it is nearly dry.

No shaking, avoid collision

The product should be placed carefully and gently when moving, and violent shaking and collision are strictly prohibited, so as not to break the shell or damage the internal electronic components.

Location

Avoid placing the product in the following places, otherwise there is a risk of fire and electric shock.

1. High temperature or dusty places.
2. kitchens or other places where there is grease and smoke.
3. places exposed to direct sunlight, or any other places where the product is exposed to high temperatures.

Do not place heavy objects

Do not place heavy objects on the product, otherwise the top of the product will be overloaded, causing the product to tip over or objects on it to fall, which may lead to the risk of injury.

Prohibition of disassembly and remodeling

Do not disassemble or remodel this product in any way. Failure to do so may result in electric shock, burns or other personal injury.

