

TERENCE

V20 Electronic Piano Instruction Manual



Please read the instructions carefully before use

Dear customer,

Thank you very much for purchasing our TERENCE product! We greatly appreciate your support and trust in our products.

At TERENCE, we are passionate about providing high-quality musical instruments that inspire creativity and bring joy to musicians of all levels. Our products not only focus on precise sound quality but also strive to bring you unlimited creative space. We hope that you can enjoy the endless charm of music and ignite your musical creativity when using our products.

We would also like to invite you to join our vibrant community of music enthusiasts on our social media platforms. By following us on Instagram, Youtube, and Tiktok, you can share musical inspiration, educational content, and connecting with like-minded individuals who share the same love for music

Facebook: <https://www.facebook.com/terencepiano>

Instagram: <https://www.instagram.com/terencepiano/>

Youtube: <https://www.youtube.com/@Terencepiano>

Tiktok: <https://www.tiktok.com/@terencepiano>

Website: terencemusic.com.cn

If you encounter any problems or need our assistance during use, please don't hesitate to reach out to our friendly customer support team via email or WhatsApp. Our after-sales team will be dedicated to providing you with support and solutions to ensure a smooth and worry-free shopping experience.

Email: terenceserve@outlook.com

Terence WhatsApp: +8613308481701

 
Wishing you a pleasant musical journey!

Sincerely,
TERENCE After-Sales Team



WhatsApp


1.Function Panel Diagram

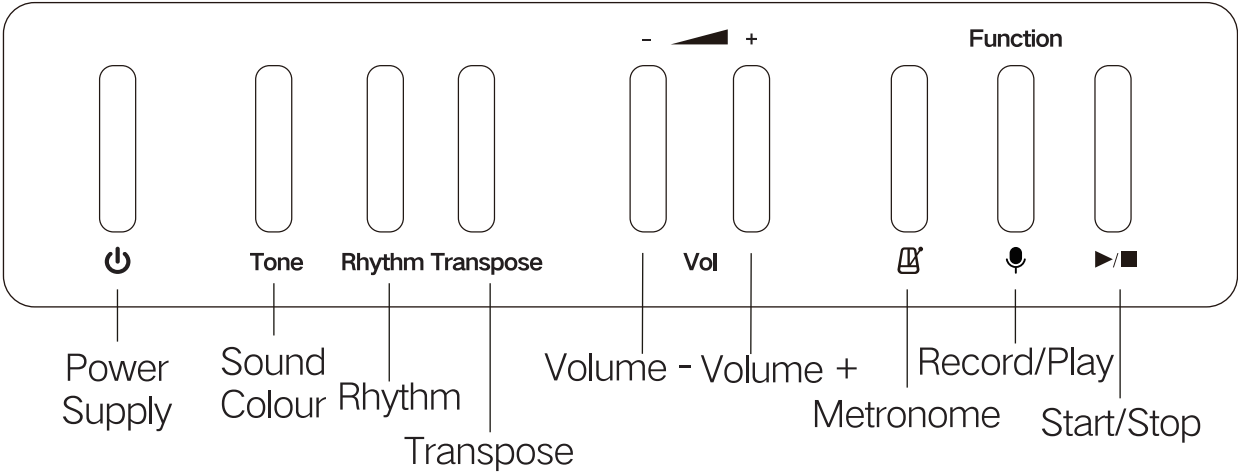


2.Charging Instructions

- 1.Type-C is the charging interface.
- 2.Not applicable to PD type fast charging cable.
- 3.Charging indicator light is red, full is green.
- 4.Battery charging time is about 5H, please charge more than 6H for the first time use.
- 5.Supported power adapter specification: DC 5V/2A.

 3.Interface

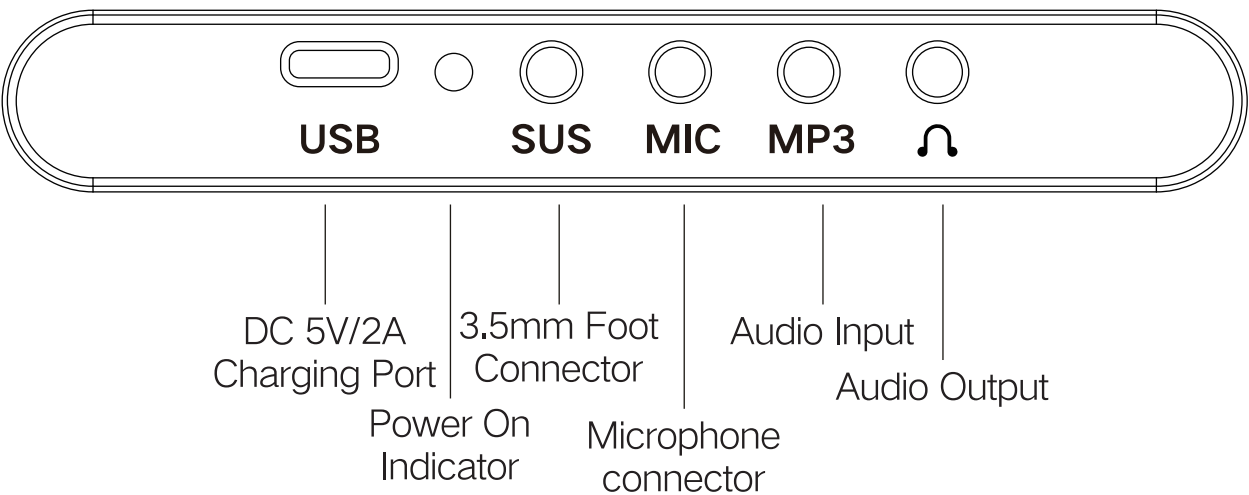

 4.Folding Switch

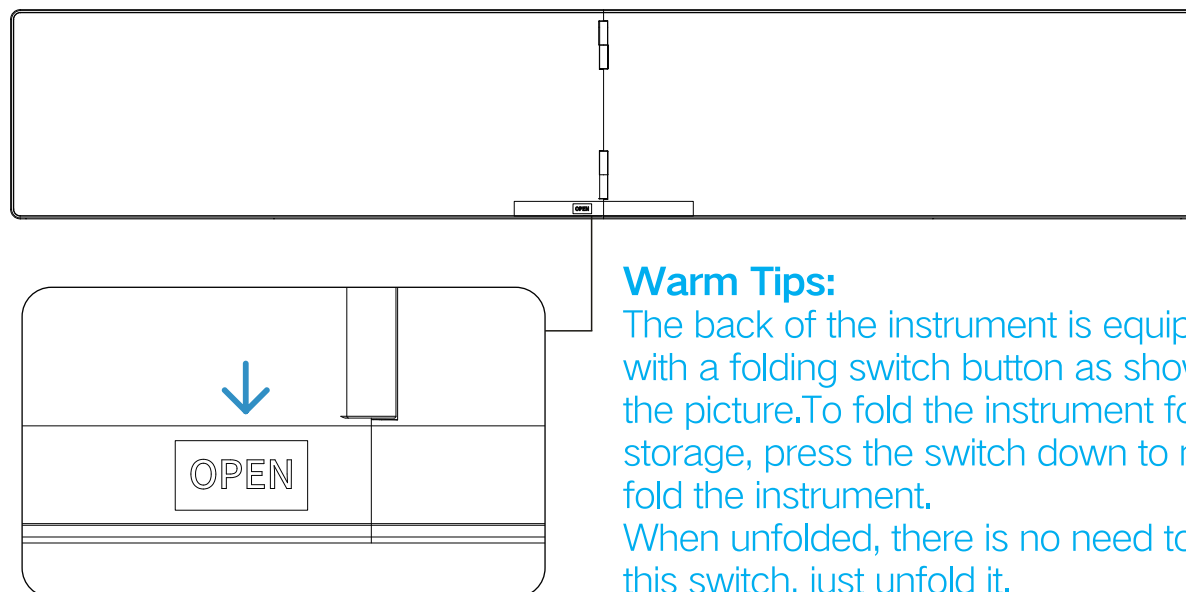

Warm Tips:

The back of the instrument is equipped with a folding switch button as shown in the picture. To fold the instrument for storage, press the switch down to manually fold the instrument.

When unfolded, there is no need to press this switch, just unfold it.

5.Product Function Description

Main Interface

The function design is simple and generous, from left to right are: On/Off, Tone, Rhythm, Transpose, Volume -, Volume +, Metronome, Record/Play, Start/Stop.

Switch on/off

1. Press and hold for 2 seconds to turn on the power, the speaker will make a 'ticking' sound, which means the power is on.
2. When the device is on, press and hold for 2 seconds to switch off, the speaker will emit a 'tick' sound to indicate the device is off.

Tone

1. Press and hold the tone key + number key or long press the tone key + short press the volume key, you can switch the tone.
2. Double-click the Tone key to restore the default piano tone.
3. Tone range (0~127) See the attached tone table for detailed tones.

Rhythm

1. Press the Rhythm key to start the rhythm, and press it again to switch off the rhythm.
2. Press and hold the Rhythm key + number keys to adjust the tempo. Long press Rhythm + short press Volume Up/Down key to switch up/down different rhythms.
3. Rhythm range (0~127). See the attached rhythm table for detailed rhythm.

Transpose

1. Press Transpose to adjust the key of C-B, double click to restore the default key, transpose the key of G~#F, the default key is C. Short press the transpose key: C, #C, D, bE, E, F, #F, G, bA, A, bB, B, C... where G~B is one octave lower.

-5	-4	-3	-2	-1	0	1	2	3	4	5	6
G	bA	A	bB	B	C	#C	D	bE	E	F	#F

2. Press and hold the transpose key to play the demonstration song, and press and hold the transpose key and number keys to select the corresponding demonstration song. Press and hold the transpose key again while playing the demonstration song, it will stop playing the demonstration song.
3. Demonstration song range (0~28). For details of the demonstration songs, please refer to the attached demonstration song list.

Volume up and down keys

1. You can adjust the volume level, volume range (0~15).
2. The volume at power on is the volume at the last power off.

Metronome

1. Press the metronome function to start the default: four-one beat.
2. Press the second to adjust to: four-two beat.
3. Press the third: four-three beat.
4. Press fourth: four-four beat.
5. Press fifth: metronome stop.
6. Press and hold metronome key + number keys to adjust metronome speed. Press and hold metronome key + short press plus or minus volume key to switch metronome type.

Recording

Long press the Record button to start recording, short press the Record button once to pause the recording, short press the Record button to play the recording after pause.

Start/Stop/Function Keys


1. Press the Stop key to pause playback when playing rhythm, demo, metronome, or recording.
2. Press and hold the Start/Stop/Function key while pressing the corresponding key to use the corresponding compound function.

A2	B2	C1	D1	E1	F1	G1	A1	B1	C	D	E	F	G	A	B
Dual Keyboard	Keyboard Drums	Sustain	Tempo		Force Switch	0	1	2	3	4	5	6	7	8	9

6.Compound Functions

Dual Keypad

 Press and hold the Start/Stop/Function key and at the same time press the Dual Keyboard (A2) to switch on the Dual Keyboard key, and then press the Dual Keyboard key again to switch off the Dual Keyboard key function with a 'tick'.

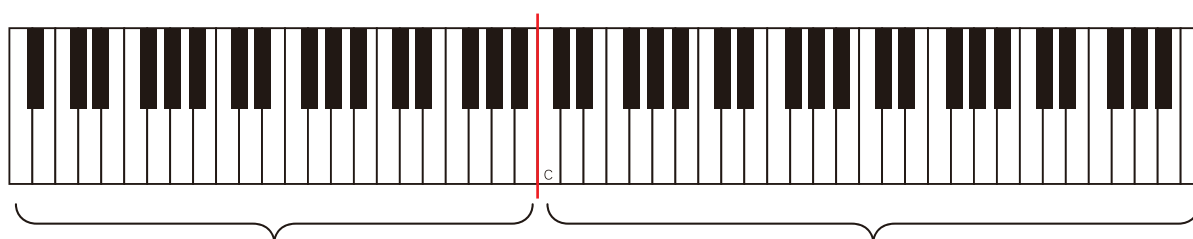

Before segmentation: A1~B4
After segmentation: A2~B5

Before segmentation: C5~C9
After segmentation: C3~C7

Keyboard Drum

Press and hold the Start/Stop/Function key while pressing the Keyboard Drum key (B2), the keyboard drum function will be switched on with a click, and the keyboard drum function will be switched off with a click when operated again.

Sound Delay

Press and hold the Start/Stop/Function key and press the sustain (C1), a 'tick' will switch on the sustain function, and another 'tick' will switch off the sustain function.

Speed

Press and hold the Start/Stop/Function key and press Speed (D1) at the same time, 'Tick' will turn on the speed function, and 'Tick' will turn off the speed function once more.

Force Switch

Press and hold the Start/Stop/Function button and press the Force switch (F1) at the same time, the Force function will be switched on with a 'Tick', and the Force function will be switched off with another 'Tick'.

Numeric Keys

0~9: With the keys of Tone, Rhythm, Transpose, etc., you can quickly adjust the tone, demonstration song, tempo, etc.

Auto Power Off

Auto power off after 10 minutes of no operation.

Low Battery Indication

When the battery is low, the speaker will beep every 1 minute to indicate that the battery is low and should be recharged as soon as possible.

Bluetooth

Bluetooth Name: TERENCE PIANO

Password: 8888

Mobile App: TERENCE PIANO

7.List of Demonstration Songs

Serial Number	Song Name		
0	ForElise		
1	FancslpO66		
2	MLS Op27		
3	MinuetInG		
4	MinutWaltz		
5	MLS No14		
6	FIBumBeeMx		
7	MinorWaltz		
8	MusetteDMj		
9	TurkMarch		
10	ThePnSonat		
11	PreldNo1Cmj		
12	Pathet3rd		
13	HURha6		
14	Mazurka		
15	LttleStars		
16	WheelsBus		
17	HeadShoud		
18	Bingo		
19	IfUHpUknlt		
20	Akatombo		
21	MyGfClock	25	Koinobori
22	AuLangSyne	26	Haruyokoi
23	Dream H&M	27	Natsnoko
24	Ifyouarehp	28	SongCloSch

8.Tone Chart

	Piano
0	Piano 1
1	Piano 2
2	Piano 3
3	Honky-TonkPiano
4	Rhodes Piano
5	Chorused Piano
6	Harpsichord
7	Clavinet
	Percussion Instrument
8	Celesta
9	Glockenspiel
10	Music Box
11	Vibraphone
12	Marimba
13	Xylophone
14	Tubular Bells
15	Santur
	Pipe Organ
16	Hammond Organ
17	Percussive Organ
18	Rock Organ
19	Church Organ
20	Reed Organ
21	Accordion
22	Harmonica
23	Bandoneon
	Guitar
24	Acoustic Guitar(nylon)
25	Acoustic Guitar(steel)
26	Electric Guitar(jazz)
27	Electric Guitar(clean)
28	Electric Guitar(muted)
29	Overdriven Guitar
30	Distortion Guitar
31	Guitar Harmonics
	Bass
32	Acoustic Bass
33	Electric Bass(finger)
34	Electric Bass(pick)
35	Fretless Bass
36	Slap Bass 1
37	Slap Bass 2
38	Synth Bass 1
39	Synth Bass 2
	String Solo
40	Violin
41	Viola

42	Cello
43	Contrabass
44	Tremolo Strings
45	Pizzicato Strings
45	Orchestral Harp
47	Timpani
	Choral Solo
48	String Ensemble1
49	String Ensemble2
50	Synth Strings1
51	Synth Strings2
52	Choir Aahs
53	Voice Oohs
54	Synth Voice
55	Orchestra Hit
	Brass Instruments
56	Trumpet
57	Trombone
58	Tuba
59	Muted Trumpet
60	French Horn
61	Brass Section
62	Synth Brass1
63	Synth Brass2
	Reed Instrument
64	Soprano Sax
65	Alto Sax
66	Tenor Sax
67	Baritone Sax
68	Oboe
69	English Horn
70	Bassoon
71	Clarinet
	Wind Instrument
72	Piccolo
73	Flute
74	Recorder
75	Pan Flute
76	Bottle Blow
77	Skakuhachi
78	Whistle
79	Ocarina
	Synth Lead
80	Lead 1 (square)
81	Lead 2 (sawtooth)
83	Lead 3 (calliope lead)
83	Lead 4 (chiff lead)
84	Lead 5 (charang)

85	Lead 6 (voice)
86	Lead 7 (fifths)
87	Lead 8 (bass+lead)
	Synthetic Soft Sound
88	Pad 1 (new?age)
89	Pad 2 (warm)
90	Pad 3 (polysynth)
91	Pad 4 (choir)
92	Pad 5 (bowed)
93	Pad 6 (metallic)
94	Pad 7 (halo)
95	Pad 8 (sweep)
	Synthetic Effects
96	FX 1 (rain)
97	FX 2 (soundtrack)
98	FX 3 (crystal)
99	FX 4 (atmosphere)
100	FX 5 (brightness)
101	FX 6 (goblins)
102	FX 7 (echoes)
103	FX 8 (sci-fi)
	Ethnic Instrument
104	Sitar
105	Banjo
106	Shamisen
107	Koto
108	alimba
109	Bagpipe
110	Fiddle
111	Shanai
	Percussions
112	Tinkle Bell
113	Agogo
114	Steel Drums
115	Woodblock
116	Taiko Drum
117	Melodic Tom
118	Synth Drum
119	Reverse Cymbal
	Sound Effects
120	Guitar Fret Noise
121	Breath Noise
122	Seashore
123	Bird Tweet
124	Telephone Ring
125	Helicopter
126	Applause
127	Gun shot

9.Tempo Table

	Song Name
0	Beguines Wing
1	Beguine_2
2	Beguine_3
3	Pop hit
4	Pop
5	Pop Malay
6	Bossa nova
7	Disco_1
8	Disco_2
9	Blue grass disco
10	Waltz_1
11	Waltz_2
12	True ballad waltz
13	Bossa Waltz
14	Easy Waltz
15	Shuffle Waltz
16	Reggae Waltz
17	Rumba Waltz
18	rch_1
19	March_2
20	Rumba_1
21	Rumba_2
22	Slow_1
23	Slow_2
24	Disco cha cha
25	Guala cha
26	Char
27	Samba_1
28	Samba_2
29	Ubminimal
30	8Bit_1
31	8Bit_2
32	16Bit_1
33	16bit_2
34	Ballad_16T
35	Country_16T
36	Tango_1
37	Tango_2
38	Polka_1
39	Polka_2
40	Pop Swing
41	Easy Swing
42	Soft Swing

	Song Name
43	Rock_1
44	Rock_2
45	Rock_3
46	Airy Rock
47	Heart Rock
48	Rock&Roll
49	Urban Rock
50	Ballad
51	Jazz Ballad
52	C.Ballad C
53	J.Ballad J
54	60s Slow Ballad
55	Piano Ballad
56	50s Ballad
57	Snake Base
58	Happy Blues
59	Old Blues
60	Blue Gras
61	Boodie_1
62	Boodie_2
63	Boodie_3
64	Shuffle_1
65	Shuffle_2
66	Dream Shuffle
67	Country Shuffle
68	Quick Shuffle
69	Reggae Shuffle
70	R&B
71	Reggae_1
72	Reggae_2
73	Reggae_3
74	Salsa_1
75	Salsa_2
76	Salsa_3
77	Tecno_1
78	Tecno_2
79	Funky_1
80	Funky_2
81	Dixie_1
82	Dixie_2
83	Foxtrot_1
84	Foxtrot_2
85	R.roll_1

	Song Name
86	R.roll_2
87	Fast Beat
88	Quick Beat
89	Smooth Beat
90	Square Beat
91	Euro Beat
92	Alpha Dance
93	Beta Dance
94	Dream Dance
95	Dance_1
96	Dance_2
97	Dance_3
98	Rap
99	The Country
100	Country Shuffle
101	Electric Keys
102	Dark Keys
103	Easy Walk
104	Destiny
105	Comedy
106	Drive
107	Liquid Nova
108	Indonesian folk
109	Absolute Music
110	Jamaica
111	Synthesis
112	Feel
113	Accelerate
114	Beach Night
115	Irish
116	Tarantella
117	Big band
118	Dan
119	Fusion
120	Horse
121	Canon
122	Latin
123	Mambo
124	New age
125	Slow rc
126	Soul
127	Twist

